

STEP 1:

Install CSR BlueSuite 2.6.8 and ADK_QCC300x.WIN.1.0.167

名称	修改日期	类型	大小
5.start hid_dfu.bat	2019/1/17 17:24	Windows 批处理...	1 KB
ADK_QCC300x.WIN.1.0.167.exe	2017/11/8 5:56	应用程序	207,043 KB
engineframeworkcpp.dll	2017/9/27 17:40	应用程序扩展	127 KB
HidDfu.dll	2017/9/27 17:40	应用程序扩展	171 KB
HidDfuCmd.exe	2017/9/27 17:40	应用程序	22 KB
InstallBlueSuite_2_6_8_1467.exe	2020/7/10 11:56	应用程序	31,824 KB
oem_key.psr	2020/7/10 14:32	PSR 文件	1 KB
open_hid_dfu.psr	2020/7/10 15:36	PSR 文件	1 KB
qcc3003_upg_signed.bin	2020/7/10 15:37	BIN 文件	402 KB
Upgrade operation video.mp4	2020/7/10 16:22	MP4 文件	10,942 KB
W800BT HID DUF guidance docume...	2020/7/10 16:24	DOC 文档	1,060 KB


STEP2:

Reset your earphone: Turn on your earphone and press "+" and "-" keys simultaneously for 5 second, until blue LED blink rapidly 6 times. Then reset is successful.


Enter DFU mode: using a Data USB cable to connect the earphone to PC. Then hold the "-" and power button simultaneously for 5 seconds, until the red led turn off. Then it is in DFU mode

STEP3: Follow the images below to run PS TOOL.


type "PSTool" in the start menu to search for it and run.

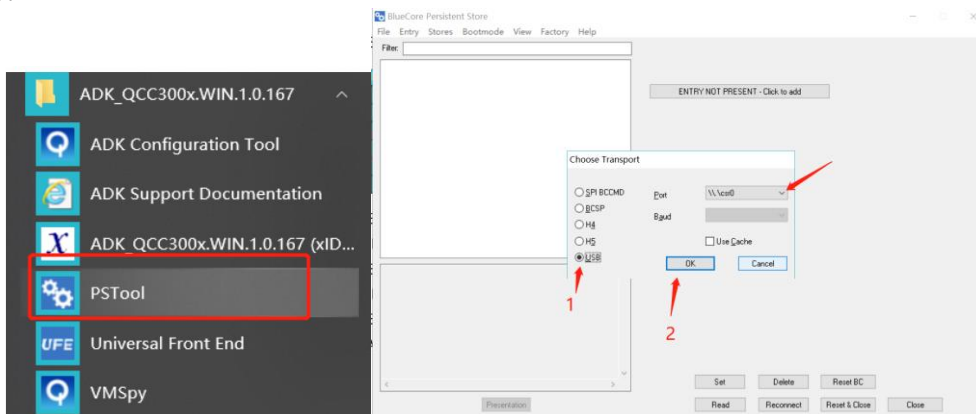

STEP4: File> Merge... >oem_key.psr

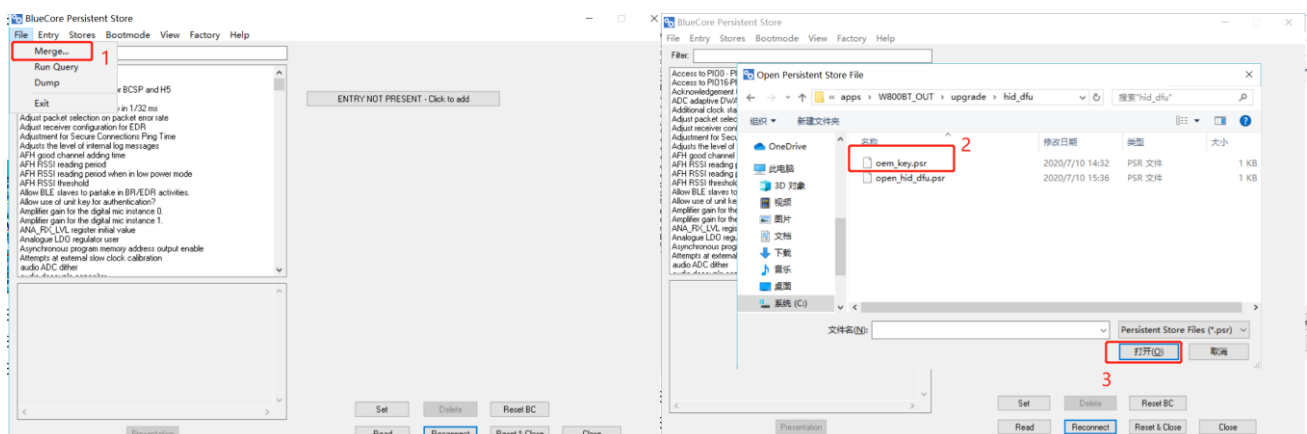


STEP5: Merge open_hid_dfu.psr

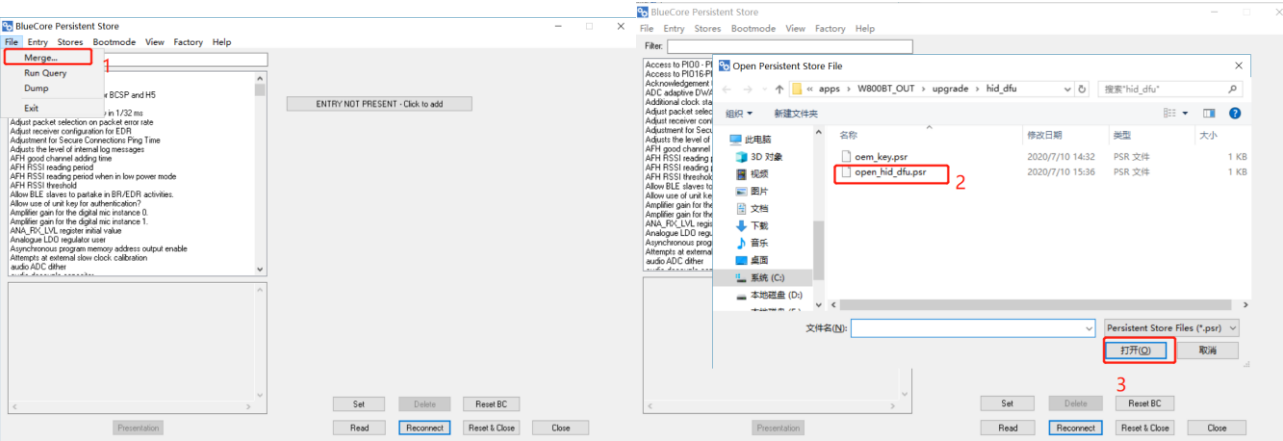

STEP 5: unplug the usb cable and plug in again

STEP 6:Start upgrading

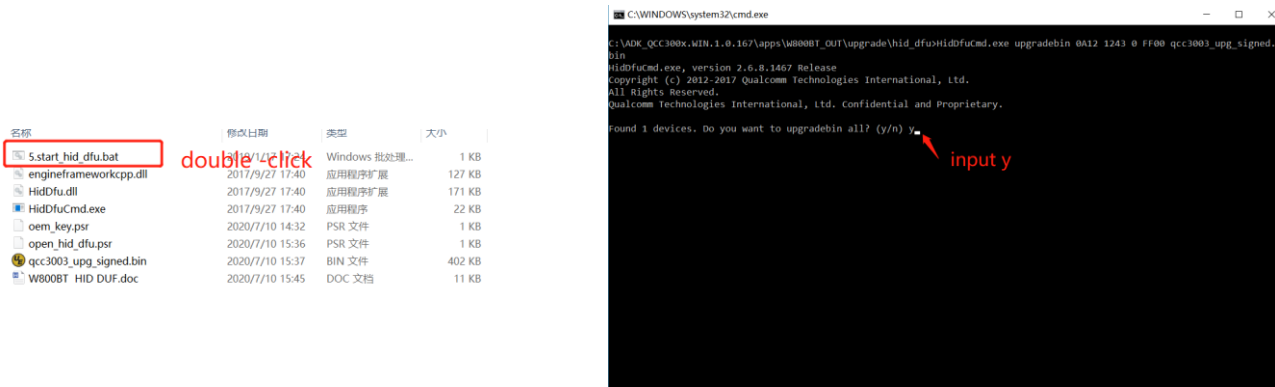

STEP 7: Upgrade complete

